



EC-CD-8380 BACODE SCANNER

QUICK START GUIDE

V1.1

1, Restore defaults

Interface : USB-HID , Trigger: Button, End mark: CR.



Restore defaults

2, Trigger Mode



Manual Mode*



Continuous Mode



Enable Sense Mode



Disable Sense Mode*

Note : Sense mode is only available for high-profile products. (option)

3, Communication Interface



USB Mode*



TTL/RS232 Mode

4, Buzzer setup



Enable Sound*



Disable Sound

5, End mark



CR*



LF



CR+LF



TAB



None

6, Other Settings



Regular Barcode*



Regular And Inverse Barcode